

## MS2/MS3 Magnetic Susceptibility System

This versatile system comprises a meter with a fully interchangeable suite of sensors for providing high resolution magnetic susceptibility readings of a range of samples including soils, rocks, powders and liquids. Magnetic susceptibility measurements provide important information about the composition and properties of materials.

The sensors require no adjustments to interoperate and lend themselves to a broad range of applications in the field and laboratory.



## Typical Applications

- Geological and soil surveys
- Palaeomagnetism
- Archaeological prospecting
- Palaeoclimatic studies
- Hydrology
- Sedimentology
- Stratigraphic correlation
- Core logging and correlation
- Soil and airborne pollution surveys
- Analysis of ferrites and magnetic inks
- Study of micro/nano magnetic particles and fluids

## Features


- Range 0.1 SI (MS2) or 26 SI (MS3)
- Resolution  $2 \times 10^{-4}$  SI
- Measurement period - 1s or -10s (MS2) or down to 0.1s (MS3)
- Wide range of field, laboratory and down-hole sensors
- Sensors fully interchangeable with no adjustment required

## MS2 Magnetic Susceptibility Meter

The MS2 is a portable meter that will operate with all MS2 sensors. Readings are displayed via an integral four-digit display. Its internal batteries are rechargeable from the mains or a vehicle charging point, with indicators for battery status and charging. Push buttons or a toggle switch are used for zeroing or taking measurements.

The serial connection can be used for control and acquisition of data, and a range switch allows the user to select high or low resolution. All sockets and switches are environmentally sealed for outdoor use.

The meter is supplied with a carrying bag for field use; an instrument stand for laboratory use; a universal mains adaptor; a vehicle charger; and a serial/USB converter.

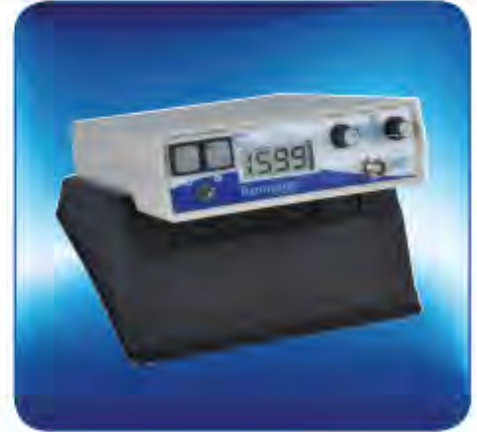

## MS3 Magnetic Susceptibility Meter

The MS3 is a compact, lightweight meter, offering increased performance over the MS2 and further significant advantages in terms of portability, configurability and connectivity to a PDA device for GPS-logged field work. It can measure magnetic susceptibility up to 26 SI (compared to 0.1 SI for the MS2) with a measurement period selectable down to 0.1s minimum.

The MS3 is completely software controlled via a USB connection to a compatible PC, laptop, PDA or mobile phone, which provides all measurement control and display. The Bartsoft software supplied with the unit gives the user control over the measurement protocol and speed, and includes options to display data in both chart and table formats. (Bartsoft details are shown at the end of this brochure.)

The MS3 operates with all MS2 sensors. The meter is sealed and suitable for both indoor and outdoor use. A rugged PDA/GPS is recommended for outdoor use and a fully compatible Trimble Nomad 900L PDA can be supplied.



| Specifications          | MS2 Meter   | MS3 Meter                                  |
|-------------------------|---|--|
| Range                   | 0.09999 SI (volume specific)  | 26 SI (volume specific)                    |
| Maximum resolution      | 2x10 <sup>-6</sup> SI (2 x10 <sup>-7</sup> CGS)   |  |
| Units                   | SI or CGS   |  |
| Measurement time        | 1s or 10s   | Selectable to 0.1s minimum                 |
| Display                 | Yes   | No (requires PC or PDA)                    |
| Laboratory data logging | Yes (with Bartsoft or Multisus)   | Yes (with Bartsoft )                       |
| Field data logging      | Not available   | Yes (with Bartsoft for Windows® CE)        |
| Weight                  | 1.9kg   | 0.13kg                                     |
| Internal battery        | 0.7Ah sealed Ni-MH gives 8 hours use before recharge is required                                    | N/A  |
| Enclosure material      | High impact ABS   | White Acetal                               |
| Operating temperature   | -10°C to +40°C  | -10°C to +40°C                             |
| Dimensions (W x H x D)  | 155 x 50 x 256mm  | 50 x 25 x 123.5mm                          |
| Battery charger inlet   | 2.1mm socket, 6-18VDC, 100mA maximum, polarity protected  | N/A  |
| Battery charge          | 16 hours full charge  | N/A  |
| RS232 interface to PC   | 1200/9600 baud rate selected on rear panel<br>Pin assignment: 1 = Ground 0v, 2 = MS2 Tx, 3 = MS2 Rx | N1200/9600 baud rate – software selectable |
| Interface connector     | 4-way rear panel Fischer socket TNC-TNC   | Hirose HR10-7R-6P                          |

## Accessories

|                  | MS2 Meter                                     | MS3 Meter   |
|------------------|---|---|
| Cables to sensor | Supplied                                      | Supplied  |
| Cables to PC     | RS232 supplied<br>Serial/USB adaptor supplied | USB supplied<br>RS232 + 5V mains charger supplied |

## MS2B Dual Frequency Sensor

This sensor is primarily used to measure the magnetic susceptibility of soil, rock and sediment samples, and is widely recognised as a standard instrument in the characterisation of the magnetic properties of soil. It can also be used in conjunction with the AMSWIN-BAR software and sample adaptor for measurements of the anisotropy of magnetic susceptibility in rocks.

The dual frequency facility permits identification of superparamagnetic magnetic grains, which helps characterise the processes that affect the sample.

The MS2B is also suitable for susceptibility measurements of magnetic fluids, inks and micro/nano particles.

The sensor accepts 10ml and 20ml cylindrical bottles, 25.4mm and 23mm cubic boxes, 35mm pots and 25.4mm cylindrical cores.



| Specification                                       |   |
|---|---|
| Calibration accuracy                                | 1% (10ml calibration sample provided)   |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 1.5s SI (1.2s CGS)<br>15s SI (12s CGS)  |
| Operating frequencies: LF<br>HF                     | 0.465kHz ±1%<br>4.65kHz ±1%   |
| Amplitude of applied field                          | 250µT peak ±10% (LF & HF)   |
| Maximum resolution                                  | $2 \times 10^{-6}$ SI (vol) ( $2 \times 10^{-7}$ CGS) (LF & HF)                         |
| HF/LF cross calibration                             | 0.1% worst case (can be adjusted using calibration sample)                              |
| Drift at room temperature                           | $<2 \times 10^{-5}$ SI ( $<2 \times 10^{-6}$ CGS) in 3 minutes (after 5 minute warm-up) |
| Dimensions (W x H x D)                              | 110 x 145 x 210mm   |
| Sample cavity internal diameter                     | 36mm  |
| Weight  | 0.7kg   |
| Enclosure material                                  | High impact ABS   |

\* MS3 measurement period is software selectable

## MS2C Core Logging Sensor

The MS2C Sensors are loop sensors, ranging from 30mm to 162mm in diameter, for high resolution volume susceptibility measurements on any type of whole cores: peat, lake or marine sediment.

These rugged sensors have a very low temperature induced drift and are designed for laboratory, field or shipboard use. They can be used with manual or automated core analysis systems.

The sensors are used in prospection, core correlation and the identification of palaeoclimatic sequences. Optimum measurement accuracy is achieved with 5 to 10mm core clearance. Calibration graphs are provided for varying core to sensor diameter.



### Specification

|   |   |
|---|---|
| Loop internal diameter                              | 30, 36, 40, 45, 47, 50, 60, 70, 72, 80, 85, 90, 93, 100, 110, 120, 125, 130, 135, 140, 145, 146, 150, 160 or 162mm (Intermediate sizes can be provided at an additional charge) |
| Calibration accuracy                                | 5% (calibration sample provided)  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 1.1s SI (0.9s CGS)<br>11s SI (9s CGS)   |
| Operating frequency                                 | 0.565kHz  |
| Spatial resolution                                  | 20mm  |
| Drift at room temperature                           | $<2 \times 10^{-5}$ SI (vol) ( $<2 \times 10^{-6}$ CGS) in 10 minutes (after 5 minutes' warm-up)  |
| Dimensions (W x H x D)                              | 200 x 290 x 162mm (with feet)   |
| Weight  | 2 to 2.7kg depending on diameter  |
| Enclosure material                                  | White polyacetal  |

\* MS3 measurement period is software selectable

## MS2D Surface Scanning Probe

This loop probe is designed for rapid assessment of the content of magnetic materials in the top 100mm of the land surface. It is used in studies of slope processes and in archaeological prospecting. The probe can only be operated in conjunction with the MS2 Probe Handle.



| Specification                                       |   |
|---|---|
| Depth of response                                   | 50% at 15mm, 10% at 60mm  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 0.6s SI (0.5s CGS)<br>6s SI (5s CGS)  |
| Operating frequency                                 | 950 ± 60Hz  |
| Drift at room temperature                           | < 10 x 10 <sup>-5</sup> SI (vol) (<10 x 10 <sup>-6</sup> CGS) in 20 minutes (after 20 minutes' warm-up) |
| Dimensions (∅ x H): overall coil                    | 208mm x 104mm<br>185mm mean diameter  |
| Weight  | 0.5kg   |
| Enclosure material                                  | Reinforced epoxy  |

\* MS3 measurement period is software selectable

## MS2E Core Logging Sensor

This sensor is designed to perform high resolution measurements on the surface of split drill or soft sediment cores. The sensitive area of the probe (i.e. the area receiving 50% maximum response) is in the form of a 3.8mm x 10.5mm rectangle, allowing very fine resolution surface measurements. The position of the long axis is identified by marks on the circumference of the sensor. The MS2E is supplied in a protective case.



| Specification                                       |   |
|---|---|
| Calibration accuracy                                | 2% (calibration sample provided)  |
| Area of response                                    | 3.8mm x 10.5mm at the end of the ceramic cylinder   |
| Depth of response                                   | 50% at 1mm, 10% at 3.5mm  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 1.5s SI (1.2s CGS)<br>15s SI (12s CGS)  |
| Operating frequency                                 | 2kHz  |
| Drift at room temperature                           | < 2.3 x 10 <sup>-5</sup> SI (vol) (< 2 x 10 <sup>-6</sup> CGS) in 10 minutes (after 5 minutes' warm-up) |
| Dimensions (W x H x D)                              | 50 x 25 x 149mm   |
| Weight  | 0.22kg  |
| Enclosure material                                  | Diecast aluminium and ceramic   |

\* MS3 measurement period is software selectable

## MS2F Surface Point Probe

This miniature probe is ideal for the stratigraphic study of exposed geological and archaeological sections. It is also used where uneven surface conditions prevent good contact with the MS2D loop. The MS2F can only be operated when connected to the MS2 Probe Handle.



| Specification                                       |   |
|---|---|
| Area of response                                    | End face and cylinder wall up to the shoulder   |
| Depth of response                                   | 10% at 6mm from end face and 4.5mm from outer diameter of end cap                                     |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 1.1s SI (0.9s CGS)<br>11s SI (9s CGS)   |
| Operating frequency                                 | 0.58kHz   |
| Drift at room temperature                           | <10 x 10 <sup>-5</sup> SI (vol) (<5 x 10 <sup>-4</sup> CGS) in 20 minutes (after 20 minutes' warm-up) |
| Dimensions: sensitive volume<br>overall             | 15mm diameter x 20mm<br>35mm diameter x 85mm  |
| Weight  | 0.05kg  |
| Enclosure material                                  | Nylon 66  |

\* MS3 measurement period is software selectable

## MS2G Single Frequency Sensor

This sensor is designed for magnetic susceptibility measurements of 1ml liquid or powder samples. Calibrated volume is 1ml but scaling correction values allow volumes down to 0.2ml to be measured. The sensor operates at a low frequency and has excellent temperature stability.

The MS2G is used for susceptibility measurements where only very small samples of homogeneous fine-grained material are available: for example, airborne particulates collected in filter papers, or particles in colloidal suspension.

The sensor accepts commercially available polythene vials with a diameter of 8mm and a length of 30mm. The sample holder is compatible with other rock measuring equipment, allowing a comprehensive range of measurements to be taken without the need for re-packing the sample. The sample cavity is situated at the tip of a boom mounted on the aluminium electronics enclosure.



| Specification                                       |  |
|---|--|
| Calibration accuracy                                | 2% (1ml calibration check sample provided)   |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 0.9s SI (0.7s CGS)<br>9s SI (7s CGS)   |
| Operating frequency                                 | 1.3kHz   |
| Drift at room temperature                           | <math>2 \times 10^{-5}</math> SI (vol)   <math>2 \times 10^{-6}</math> CGS in 5 minutes (after 5 minutes' warm-up) |
| Sample cavity dimensions                            | 8.5mm diameter x 28mm in height  |
| Sensitive region                                    | 5mm height at centre of cavity   |
| Dimensions (W x H x D)                              | 91 x 67 x 184mm  |
| Weight  | 0.67kg   |
| Enclosure material                                  | Aluminium and ceramic  |

\* MS3 measurement period is software selectable



## MS2K Surface Sensor

This handheld sensor is designed to provide highly repeatable measurements of the volume magnetic susceptibility of moderately smooth surfaces. Applications include description of magnetic stratigraphy and identification of horizons. It can also be used for characterisation of outcrops and logging split cores. The sensor has applications in materials testing where the relatively low operating frequency permits measurement on some of the less electrically conductive metal alloys, for example stainless steel, without magnetisation.



| Specification                                       |   |
|---|---|
| Calibration accuracy                                | 1% (calibration sample provided)  |
| Area of response                                    | 25.4mm diameter (full-width, half-maximum)  |
| Depth of response                                   | 50% at 3mm, 10% at 8mm  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 1.2s SI (1s CGS)<br>12s SI (10s CGS)  |
| Operating frequency                                 | 0.93kHz   |
| Drift at room temperature                           | $<2 \times 10^{-5}$ SI (vol) ( $<2 \times 10^{-4}$ CGS) in 5 minutes (after 5 minutes' warm-up) |
| Environmental                                       | May be used under wet conditions: not suitable for immersion                                    |
| Dimensions (W x H x D)                              | 50 x 170 x 165mm  |
| Weight  | 0.32kg (1.20kg with carrying case)  |

\* MS3 measurement period is software selectable

## MS2H Downhole Sensor

The MS2H is a downhole sensor for profiling the magnetic susceptibility of strata in 25mm nominal diameter auger holes. (Suitable augers can be supplied.) The detachable probe is fitted to the lower end of a push-tube to give an assembled length of 1 metre. Waterproof screw couplings allow further 1-metre extension tubes to be added to achieve any practical length. The probe assembly is hand guided within the hole during logging. Graduations ensure depth control to a resolution of 1cm. The probe connects to the meter via a 5mm diameter cable, which may be extended to any practical length up to 100m.

The area of sensitivity for magnetic investigation radiates uniformly from the end of the probe, resulting in tolerance to inhomogeneities. Strata as narrow as 12.5mm in thickness can be discriminated. Measurements to a resolution of  $1 \times 10^{-5}$  SI (volume) are obtained in less than 1 second. A low operating frequency of 1.3kHz ensures immunity to electrical conductivity effects.

Applications include cultural stratigraphy in archaeology, geomorphology, landslide characterisation, paleosol identification, pedology, erosion studies and stratigraphic correlation.



### Specification - MS2H Sensor

|   |   |
|---|---|
| Calibration accuracy                                | 1% (calibration sample provided)  |
| Spatial resolution (vertical)                       | 12.5mm (full-width, half-maximum)   |
| Depth of horizontal penetration                     | 50%/2mm, 10%/5.5mm, 1%/13mm   |
| Operating frequency                                 | 1.3kHz  |
| Calibration accuracy                                | 5% in $\varnothing 22$ mm sample  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 0.9s SI (0.7s CGS)<br>9s SI (7s CGS)  |
| Thermal drift (typical)                             | $2 \times 10^{-5}$ SI/ $^{\circ}$ C (below 20 $^{\circ}$ C)<br>$-1 \times 10^{-5}$ SI/ $^{\circ}$ C (above 20 $^{\circ}$ C) |
| Thermal setting time (typical)                      | 30s/ $^{\circ}$ C (step change)   |
| Markings for plane of sensitivity                   | Lowest graduation   |
| Dimensions ( $\varnothing$ x L)                     | 21.5 x 153mm  |
| Weight  | 0.13kg  |

\* MS3 measurement period is software selectable

## Specification – Push tubes


|  |  |
|--|--|
| Construction                                     | Anodised aluminium alloy with BS015 'O' ring seal and stainless steel threaded couplings |
| Lengths including union:<br>extension<br>primary | 101.5cm<br>91.5cm  |
| Weight   | 0.35kg each  |

## Specification – Connecting cable

|              |   |
|--------------|---|
| Construction | 10m length, 5mm diameter co-axial (may be extended to 100m max) |
| Weight       | 0.4kg/10m   |

## Specification – Carrying case

|                        |                   |
|------------------------|-------------------|
| Dimensions (W x H x D) | 380 x 140 x 138mm |
| Weight (full)          | 10kg              |

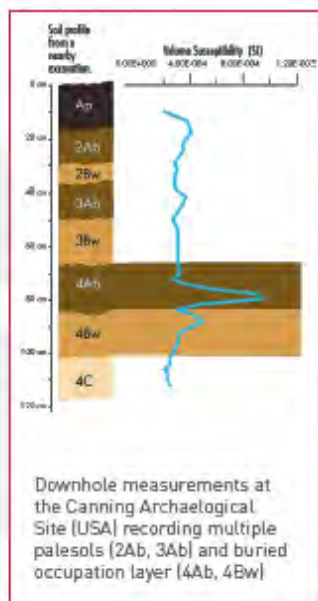

## MS2 Probe Handle

This device incorporates the electronics for both the MS2D and MS2F and is required for connection of these sensors to the MS2 or MS3 meter. The handle is submersible to the depth of the electronics unit (0.6m).



| Specification                              |   |
|--|---|
| Dimensions: upper section<br>lower section | 430mm length<br>360mm length                        |
| Weight                                     | 0.6kg   |
| Connections: mechanical<br>electrical      | 11TPI 'D' ring sealed screw coupling<br>50 ohms TNC |

## MS2 Equipment Carrying Cases

Tough, lockable cases are available in a variety of sizes and carrying weights, to suit the combination of instruments ordered. Interior cut-outs provide maximum protection for the equipment.



| Specification                  |                            |
|--------------------------------|----------------------------|
| Maximum dimensions (W x H x D) | 710 x 310 x 570mm          |
| Maximum weight                 | 18.6kg including equipment |

## MS2/MS3 Susceptibility/Temperature System

This system measures the magnetic susceptibility of samples over the temperature range -200°C to +850°C. It is used in the investigation of the magnetic properties of minerals and for the determination of Curie transition temperatures.

The system comprises: the MS2 or MS3 Meter; MS2W Water Jacketed Sensor; MS2WF Furnace; MS2WFP Power Supply Unit; and a self-contained water coolant supply, fully interlocked to prevent the MS2WF Furnace operating without coolant flow. The Geolabsoft software package (running under Windows®) collects data and displays the results during the measurement sequence.



## MS2W Water Jacketed Sensor

This water jacketed sensor has a 30mm diameter sample cavity for 10ml samples. The water jacket thermally isolates the electronics from the sample cavity, giving excellent temperature stability and keeping drift during the measurement sequence low.

For high temperature measurements to +850°C, the MS2WF Furnace and MS2WFP Power Supply Unit are required. The sensor can also be used without them for measurements from -200°C to room temperature, where the sample is cooled in liquid nitrogen and allowed to warm slowly.



| Specification                                       |  |
|---|--|
| Calibration accuracy                                | 1% (calibrated for 10ml sample)  |
| Measurement period (MS2)*: x 1 range<br>x 0.1 range | 2.4s SI (1.9s CGS)<br>24s SI (19s CGS)   |
| Operating frequency                                 | 0.348kHz   |
| Drift during measurement                            | <2 x 10 <sup>-5</sup> SI (vol) (<2 x 10 <sup>-4</sup> CGS)/30 minutes with 2l/minute water flow through sensor |
| Dimensions: probe internal ø<br>overall (W x H x D) | 31mm<br>96 x 65 x 255mm  |
| Weight  | 0.85kg   |
| Sensitive area                                      | 15 mm height – centre of cavity  |
| Coolant (water) flow rate                           | 2 litres/min minimum recommended   |
| Maximum water pressure                              | 300cm Hg   |
| Connectors: water<br>electrical                     | 6m<br>TNC  |
| Mounting  | 13mm rod   |
| Materials   | Glass filled polycarbonate/glass   |

\* MS3 measurement period is software selectable

## MS2WF Furnace

The heating element of the MS2WF Furnace is installed inside the cavity of the MS2W Water Jacketed Sensor, for heating samples from room temperature to +850°C. The element is wound with non-inductive platinum and mounted on a quartz cylinder to ensure uniform heating of the sample, while insulation reduces the maximum external temperature to around 100°C. A ceramic crucible, specially designed to fit onto the thermocouple, is provided for granular or powder samples.

The sample temperature is displayed on a digital panel meter to a resolution of 0.1°C when connected to a thermocouple, either type S (Pt/Pt-Rh: for measurements up to +850°C) or type T (Cu/Cu-Ni: for measurement in the range -200°C to +350°C). The sample temperature is also available as an analogue voltage.



| Specifications   |   |
|--|---|
| Dimensions: overall (W x H x D)                              | 135 x 350 x 235mm   |
| heating cavity   | 17mm Ø 25mm usable height   |
| ceramic crucible cavity                                      | 13mm Ø 20mm usable height   |
| Weight   | 2kg   |
| Materials  | Silica/platinum/alumina/stainless steel   |
| Electrical resistance  | 3Ω at room temperature  |
| Power requirements   | 100W max. 28V DC at 3A  |
| Internal magnetic field                                      | Measured less than 0.05A/m  |
| Operating temperature  | 850°C maximum intermittent use  |
| Voltage/temperature ratio                                    | Approx. 0.027V/°C with good thermal insulation  |
| <b>Fixed thermocouple (non magnetic, high temperature)</b>   |   |
| Type   | 'S' (Pt/Pt. 10%Rh) built-in and permanently wired to base electronics unit with adjustable height |
| Calibrated range   | -50°C to 850°C  |
| <b>Separate thermocouple (non magnetic, low temperature)</b> |   |
| Type   | 'T' (Cu/Cu Ni) Remote connection via polarised plug and socket                                    |
| Calibrated range   | -250°C to +400°C  |

| <b>Base</b>                |   |
|----------------------------|---|
| Materials                  | Aluminium   |
| Dimensions                 | 235 x 135 x 90mm  |
| Retort stand dimensions    | 260 x 9.5mm   |
| <b>Digital thermometer</b> |   |
| Type                       | 4 digit display with polarity   |
| Output                     | 1 mV/oC via 4mm sockets   |
| Serial output              | RS232 via RS485/RS232 converter   |
| Bits per character         | 1 start, 8 data, 2 stop, no parity  |
| Baud rate                  | 1200  |
| Trigger                    | From GeoLabsoft program   |
| Output                     | ASCII string  |
| Sockets                    | 2 x 4mm Va out<br>1 x 8-way polarised MS2WFP to MS2WF connection (Trident ringlock)<br>1 x polarised Cu/Cu.Ni. thermocouple connector |

## MS2WFP Power Supply Unit

This unit supplies power to the MS2WF Furnace to heat the sample. The sample temperature can be increased or decreased at a pre-selected linear rate, or maintained at a pre-set level using manual controls.



| Specification                                       |  |
|---|--|
| Dimensions (W x H x D)                              | 260 x 143 x 360mm  |
| Weight  | 7kg  |
| Power input (rear panel IEC inlet)                  | 110V or 220V AC selectable, 200W max.  |
| Power output  | 150W max.  |
| Power lead colour code                              | Brown - LIVE<br>Blue - NEUTRAL<br>Green/Yellow - EARTH   |
| Line fuse   | 2 A anti-surge 20 x 5mm  |
| Output voltage                                      | ±20V max.  |
| Minimum load resistance                             | 3Ω   |
| Maximum output current                              | 4A   |
| Maximum ripple voltage                              | 0.2V p-p   |
| Serial data I/O                                     | 9-way 'D' connectors : RS232   |
| Output data format<br>temperature<br>susceptibility | see MS2WF specification<br>see MS2 specifications  |
| 8-way socket connections                            | A 0 V power<br>B +ve furnace (active)<br>C -ve furnace<br>D 0 V signal<br>E 1 mV/oC in<br>F Rx data<br>G Tx data<br>H +15V out |
| 9-way plug (MS2 Meter) connections                  | 2 Tx<br>3 Rx<br>5 0V   |
| 9-way skt (Computer) connections                    | 2 Tx<br>3 Rx<br>4 DTR link to 6 DSR<br>7 RTS Link to 8 CTS<br>5 0V   |
| 3-way skt (water cooling system)                    | 1 +ve<br>2 -ve<br>3 Signal   |



## Software

---

### Bartsoft

The MS3 Meter has no display or controls because it is designed to be connected to a PC, laptop or PDA running the supplied Bartsoft software. This provides a range of features to control the meter and display the measured results.

#### Main Features

- **Adjustable measurement period** to optimise the overall time taken and the required data resolution. This can more than halve the overall experimental time, compared to older MS2 Meter systems.
- **User-definable measurement protocols** provide a level of automation in the measurement process. Predefined protocols are available for tasks such as individual sample tests, core logging, two-dimensional X-Y surveys and one-dimensional downhole surveys.
- **Data display options** including tabular format, with selectable data columns and X-Y chart plots.
- **Automatic correction factors** for non-standard sample volume, mass specific results and temperature drift.

Data collected can be saved in Bartsoft's native format or copied into other applications (e.g. spreadsheets) for further analysis.

#### Versions available

- Bartsoft for Windows requires Windows 2000 / Windows XP / Windows Vista / Windows 7 / Windows 8 (both 32-bit and 64-bit).
- Bartsoft for Windows CE runs under Windows Mobile 6 and includes GPS compatibility, enabling magnetic susceptibility data to be tagged with a GPS location. (This requires a Windows Mobile device with internal or external GPS.)

Note that Bartsoft for Windows can be used with the MS2 Meter. Most features will function, although the measurement period is fixed at 1.0s or 0.1s by the meter. Bartsoft for Windows CE will not operate with the MS2 Meter.

### AMSWIN-BAR

This package is used with the MS2 Meter, MS2B Sensor and MS3 Meter to measure the anisotropy of magnetic susceptibility for magnetic fabric analysis. A sample adaptor designed for 25mm diameter palaeomagnetic samples is supplied with the software. The software operates under Windows 2000 / Windows XP / Windows Vista.

### Geolabsoft software

This software for the MS2/MS3 Susceptibility/Temperature System runs under Windows 98 / Windows 2000 / Windows NT / Windows XP / Windows Vista. Data is collected via a single RS232 serial interface and plotted in real time. Drift correction is applied at the end of the measurement sequence.